

Sack Master

The Worlds Best Range of High Quality Sack Samplers




A unique range of sample collection methods are available.

Type: Single point

Material: 316 stainless steel or HDPE

- Operation:
1. Insert the sampler though the side of the sack.
 2. Angle sampler downwards to allow the product to flow into the sample collecting container
 3. Seal the hole using an Ultra Adhesive Label (see page 98)

Special designs are available on request.

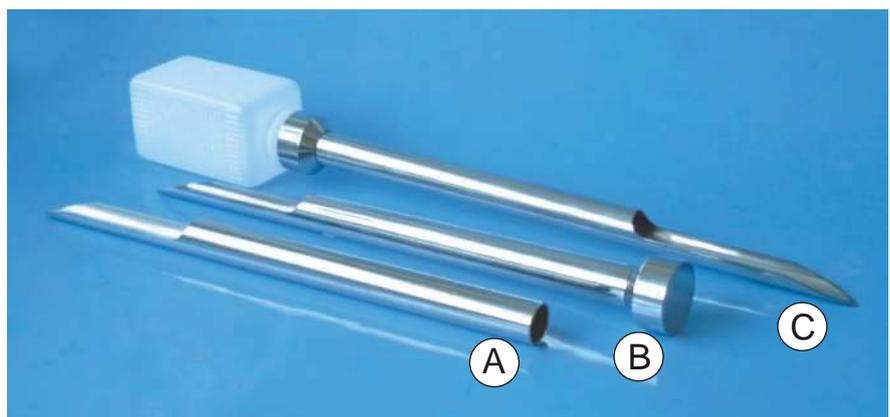

Seal hole with a UA label
(See Pages 98 to 101)



(A) Plain

- Sample collecting bag is held over end of sampler
- Plain end
- Electropolished



(B) End Cap

- Cap screws on to end of Sack Sampler
- Easily removed for cleaning
- Sample is retained in Sack Sampler
- Electropolished



(C) Bottle Adapter

- Adapter screws on to end of Sack Sampler
- Sample is collected in either a 250ml or 500ml bottle
- After sampling unscrew bottle and screw on the plastic bottle cap
- Electropolished



| Part No. | Sampler Description | Sampler End Fitting | QUOTE REQUEST |
|--|--|---------------------|---------------|
| 1320A-01 | Sack Master P | Plain | |
| 1320B-01 | Sack Master EC | End Cap | |
| 1320C-01 | Sack Master BA | Bottle Adapter* | |
| * Sampler supplied with one 250ml Sample Bottle (Part No. 8165A-250) | | | |
| Accessories | | | |
| 8165A-250 | Sampling Bottle - 250ml - HDPE - for use with bottle adapter | | |
| 8165A-500 | Sampling Bottle - 500ml - HDPE - for use with bottle adapter | | |
| 8001A-500 | Cleaning Brush - 500mm length | | |
| XRF Certification | XRF certification (see page 102) | | |

Disposable Sack Sampler



1. Unwrap Sampler



2. Insert the sampler through the side of the sack.
Angle sampler downwards to allow the product to flow into the sample collecting bag



QUOTE REQUEST SteriWare®

| Part No. | Length | Diameter | Pre-Sterilised | Quantity per Box |
|------------|---|----------|----------------|------------------|
| 8085A-100 | 400mm | 25mm | No | 100 |
| 8085A-100S | 400mm | 25mm | Yes | 100 |
| 8080A-450 | Sample Collecting Bag 450ml - for hygienic use. Sterile | | Qty: 1000 bags | |
| 8080A-900 | Sample Collecting Bag 900ml - for hygienic use. Sterile | | Qty: 1000 bags | |