



## Slot Sampler

Multilevel Sampler gives a Single Composite Sample

The Slot Sampler is ideal for taking a large volume, cross sectional sample from a container. The sampler has a robust all stainless steel construction and is suitable for sampling free flowing powders and granules.

- Cross section, composite sample
- Suitable for taking large volume samples


Slot Samplers are supplied with pointed tips. Rounded Tips are available as an option.

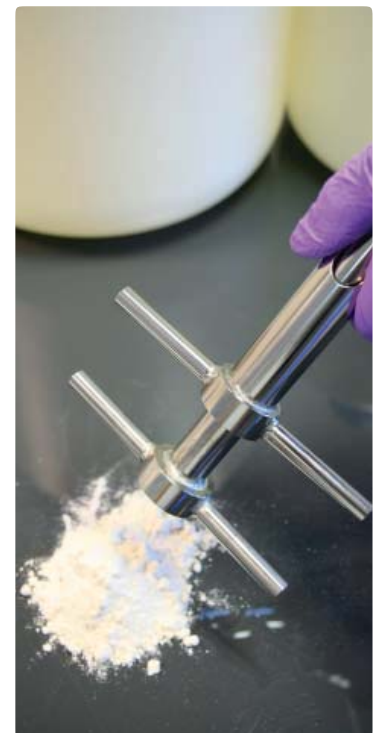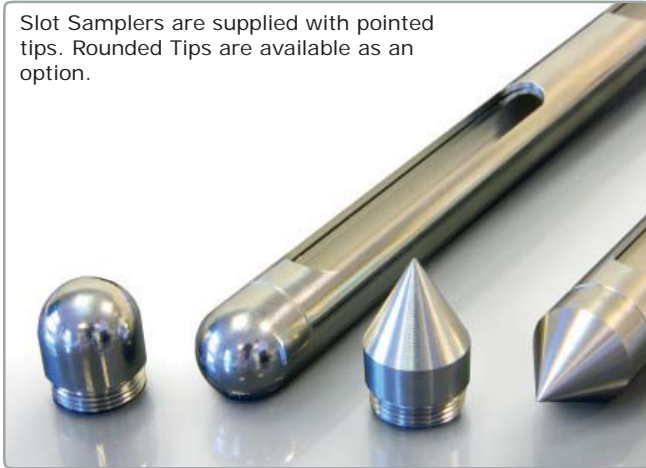

Sample being discharged from a Standard Slot Sampler without a Bottle Holder


### Operation

1. Insert the sampler into the product
2. Turn the handle to open the slot - the product can now be collected in the central tube
3. Turn the handle to close the slot
4. Remove the sampler
5. Invert the sampler to discharge the sample

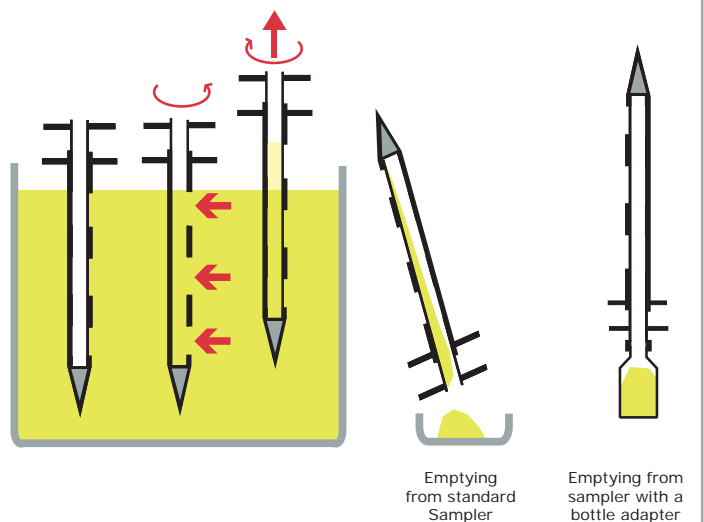



The Slot Sampler is available with a bottle holder. This enables the sample to be emptied directly into a bottle.

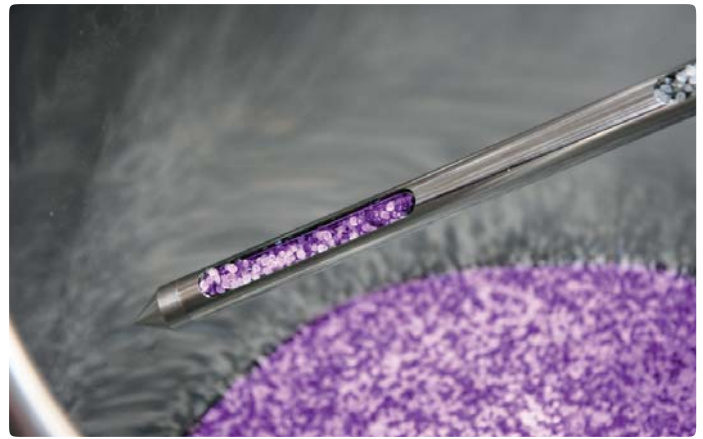

A Slot Sampler taking a sample from a drum

- Improved Containment
- Save time
- Can be used with either a 250ml or 500ml bottle

[QUOTE REQUEST](#) ✓

[BUY ONLINE](#) ✓

Stock No.	Bottle Hldr	Length	Diameter	Material	Volume	
675 1210A300	No	300mm	25mm	316L stainless steel	45ml	3
675 1210A600	No	600mm	25mm	316L stainless steel	110ml	3
6751210A1000	No	1000mm	25mm	316L stainless steel	190ml	4
675 1210A1500	No	1500mm	25mm	316L stainless steel	300ml	5
675 1210A2000	No	2000mm	25mm	316L stainless steel	370ml	5
675 1210B600	Yes*	600mm	25mm	316L stainless steel	110ml	3
675 1210B1000	Yes*	1000mm	25mm	316L stainless steel	190ml	4
675 1210B1500	Yes*	1500mm	25mm	316L stainless steel	300ml	5
675 1210K1000	No	1000mm	40mm	316L stainless steel	750ml	3
6751210K1500	No	1500mm	40mm	316L stainless steel	1000ml	4
675 1210K2000	No	2000mm	40mm	316L stainless steel	1300ml	4
675 1210J900	No	900mm	50mm	Aluminium	880ml	3
675 1210J1500	No	1500mm	50mm	Aluminium	1700ml	5
675 1210J2500	No	2500mm	50mm	Aluminium	2900ml	7

675 8165A250	Sample collecting bottle - 250ml. HDPE
675 8165A500	Sample collecting bottle - 500ml. HDPE
675 TIP2	Round tip for 25mm diameter samplers (1210A & 1210B)
675 TIP3	Round Tip for 40mm diameter samplers (1210K)

Cleaning brushes	See page 129 for full range
Storage Cases	See page 130 for full range
XRF	Material certification verified by XRF (see page 139)
* Don` t forget to order a sample collecting bottle	





## Powder Trier

High Quality Trier - ideal for powders, granules & grains

The Sampling Systems Powder Trier is ideal for taking a large volume, cross sectional sample from a container. The sampler has a robust all stainless steel construction and is suitable for sampling cereals, grains, free flowing powders, granules and even slightly cohesive powders

- Cross section (composite sample)
- 316 stainless steel, bright finish
- Suitable for taking a large volume sample from compacted powders, grains etc.

The cutting scroll helps sampler go into product

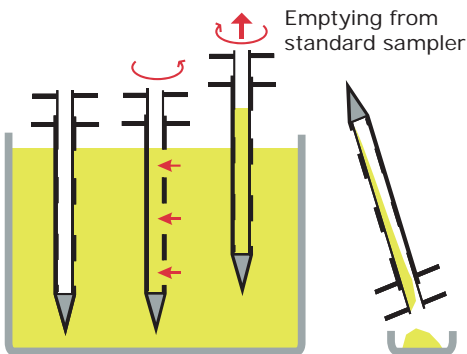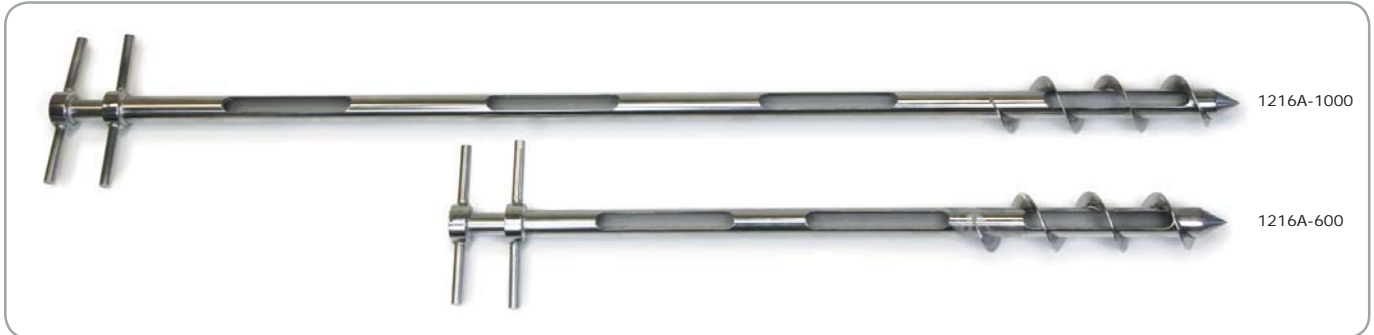

### Operation

1. Insert the sampler into the product
2. Turn the handle to open the slot - the product can now be collected in the central tube
3. Turn the handle to close the slot
4. Remove the sampler
5. Invert the sampler to discharge the sample

Note: The cutting scroll is not shown in the sketches

QUOTE REQUEST 

BUY ONLINE 

Stock No.	Length	Number of Slots	Max Sample Volume
675 1216A600	600mm	3	110ml
675 1216A1000	1000mm	4	190ml
675 1216A1500	1500mm	5	300ml

Cleaning brushes See page 129

Storage Cases See page 130

XRF Certification See page 139