

## **Micro Mate**

The MicroMate is designed for low volume sampling of free flowing powders and granules.


The MicroMate can be easily adjusted so that it can take a range of sample sizes.

- Made from high quality 316 stainless steel
- Adjustable takes a range of sizes .
- . Simple to use





- Insert the sampler into the product. Ensure that the inner rod 1. extends beyond the outer tube.
- 2. At the required depth pull up the inner rod to draw the product into the sampler
- 3. Withdraw sampler.
- 4. Push down handle to release sample

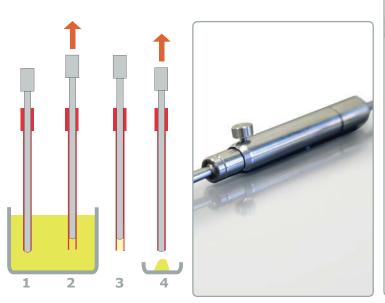





## QUOTE REQUEST 💜

QUOTE REQUEST V BUY				
Stock No.	Sample Volume	Length	Material	Outer Diameter
675 1070A350	Variable - up to 0.1ml	350mm	316ss	5mm
675 1070A500	Variable - up to 0.1ml	500mm	316ss	5mm